






**For Painters By Painters**

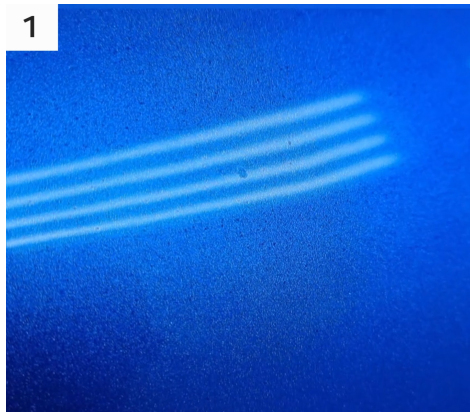


**1**  
*Identify paint defect*

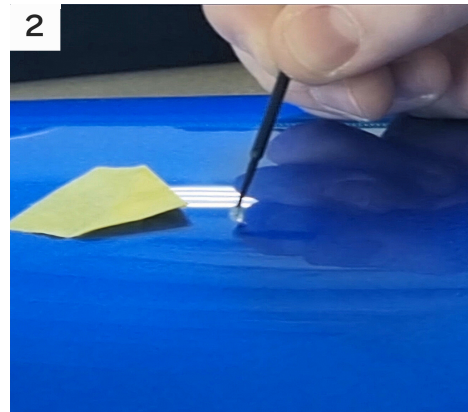


**2**  
*Apply the UV clear coat*

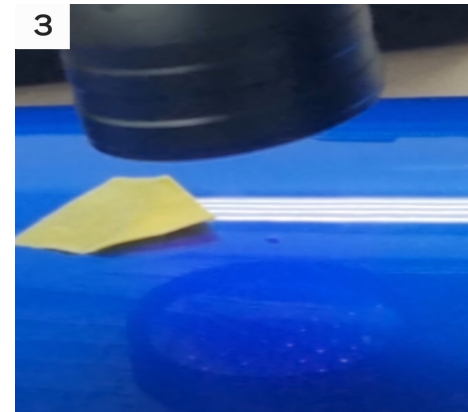

**3**  
*Cure the UV clear coat using the UV torch for 5 seconds\**

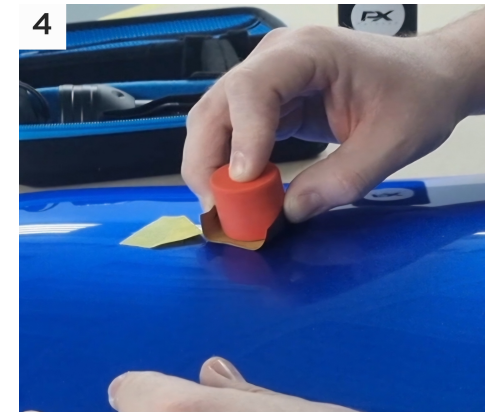


**4**  
*Flat using the denibbing block provided P1200 - P3000*

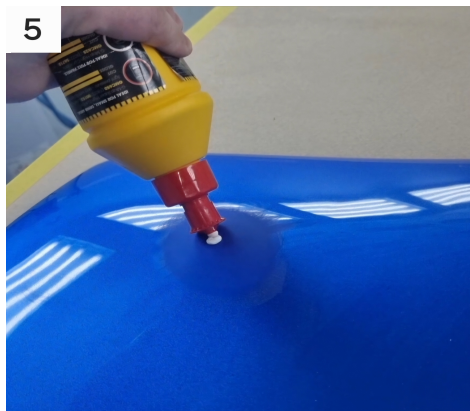

**5**  
*Polish as per the requirements of the brand you are using*



**6**  
*Final Inspection*

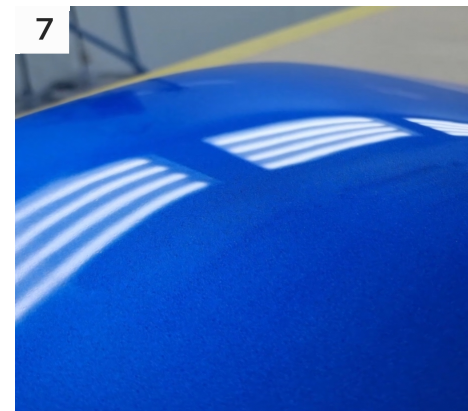

**For more information please visit [www.PainTeX.shop](http://www.PainTeX.shop) or email [Sales@paintex.shop](mailto:Sales@paintex.shop)**

**Health and safety**

Bodyshop repair processes can produce respiratory, hearing and eye hazards  
Control measures like PPE should be considered\*

**Suggested PPE**

- UV Eye Protection
- Respirators
- Hearing Protection

For more information visit the HSE website  
[www.hse.gov.uk/mvr/bodyshop](http://www.hse.gov.uk/mvr/bodyshop)

\* It is ultimately the responsibility of the employer to select the most appropriate control measures which could include personal protective equipment based on a full risk assessment

**\*Disclaimer**  
Our UV Clear coat applied in a small area, i.e. a silicone or stone chip will cure in 5 seconds larger applications will require longer for a complete cure